


Aurora Design Quick Start Guide

FMR
BTU

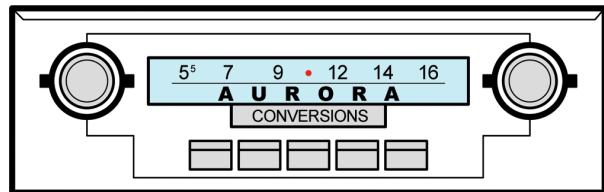

BT
USB

Basic Radio Control Actions



Virtual Fader



Virtual Balance



Loudness / EQ*
On/Off



AVC Toggle*
On/Off

Bluetooth/USB Control Actions



Pair/Voice Command
Conference Call



Pause/Play Music
Mute/Unmute Call



Next Song
Accept Call



Previous Song
Reject Call



Next Album
(USB sequential)



Previous Album
(USB sequential)

Status Voice Assist Action



In radio mode, this action will announce the frequency and optionally the channel ID for the current station. In other modes it will announce which input is currently active. (Aux/BT phone-streaming/USB)

Seek/Scan Actions (motorized tuner)

↓ Seek



↓ Scan

When in radio mode, press the Seek button once to seek to the next station. Double press the Seek button to start a scan. The radio will scan to the next station, pause and then continue until any button/action is executed.

Auto Scan Action (standard tuner)



TUN



Start Scan



Stop Scan



Cancel Scan

When in radio mode, double twist the tuning knob to start a scan. (The dial pointer will not move while scanning) To stop on a station, turn the tuning knob. The station will be temporarily stored. To find the actual station on the dial, turn the tuning knob within 5 seconds of stopping the scan. When turning the dial in the correct direction, the radio will mute until the station is found.

Advanced Actions



Signal Strength: In radio mode, While the *Voice Assist HD* is speaking the station information, performing this action again will start a Signal Strength readout. To end, perform action again or tune off station.



Version: This action will announce the firmware version of the FMR and any installed option cards.

Optional Seek Button Actions**

↓ Voice Command
Conference Call

↓ Pause/Play Music
Mute/Unmute Call

↓ Next Song
Accept Call

↓ Previous Song
Reject Call

↓↓ Next Album
(USB sequential*)

↓↓ Previous Album
(USB sequential*)

↓ Quick press

↓ Press 1 second

↓ Press & hold

** On signal seeking radios, once in the Bluetooth or USB mode, the seek button (Wonderbar) can be used to control the radio. On Town & Country radios, each button will perform the actions on each side of the chart above.

* See Advanced Features Guide

Note: To perform an Action, smoothly twist the control forward and back in a continuous motion as shown by the arrows, repeating for the number of arrows shown.